

**BINKS®** **MODEL 95AR AND 95ARV**  
**AUTOMATIC CONVENTIONAL AIR SPRAY GUN**  
**95AR 6467-XXXX-X**  
**95ARV 6489-XXXX-X CERAMIC COATING (OBS)**



STANDARD SET-UPS AVAILABLE (See page 9).  
OPTIONAL SET-UPS PLEASE ORDER SEPARATELY  
(See pages 8 and 9).

**AIR SPRAY GUN WITH STAINLESS STEEL FLUID INLET**

**MODEL 95AR AND 95ARV AUTOMATIC AIR  
SPRAY GUNS**

Ideal for coating test laboratories and where repeated fluid flow adjustments are required. The 95AR Automatic Spray Gun is a conventional style air spray gun. It incorporates all stainless steel fluid inlet, fluid nozzle, and fluid needle; 95ARV incorporates stainless steel fluid inlet, fluid nozzle with T.C. insert and fluid needle with T.C. tip for spraying a wide variety of conventional and waterborne coatings. It is also pneumatically activated for application with reciprocating, rotary, spindle machines, and in stationary gun set-ups. Exceptionally rugged in construction, the Binks

Models 95AR and 95ARV automatic guns are built to stand up under hard, continuous use. However, like any other fine precision instruments, their most efficient operation depends on a knowledge of their construction, operation, and maintenance.

Properly handled and cared for, these guns will produce beautiful, uniform finishing results long after other spray guns have worn out.

**⚠ CAUTION**

Before removing any components from spray gun, shut off air and material pressure.

In this part sheet, the words **WARNING**, **CAUTION** and **NOTE** are used to emphasize important safety information as follows:

## **WARNING**

Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

## **CAUTION**

Hazards or unsafe practices which could result in minor personal injury, product or property damage.

## **NOTE**

Important installation, operation or maintenance information.

## **WARNING**

### Read the following warnings before using this equipment.



#### **READ THE MANUAL**

Before operating finishing equipment, read and understand all safety, operation and maintenance information provided in the operation manual.



#### **OPERATOR TRAINING**

All personnel must be trained before operating finishing equipment.



#### **EQUIPMENT MISUSE HAZARD**

Equipment misuse can cause the equipment to rupture, malfunction, or start unexpectedly and result in serious injury.



#### **LOCK OUT / TAG-OUT**

Failure to de-energize, disconnect, lock out and tag-out all power sources before performing equipment maintenance could cause serious injury or death.



#### **AUTOMATIC EQUIPMENT**

Automatic equipment may start suddenly without warning.



#### **PRESSURE RELIEF PROCEDURE**

Always follow the pressure relief procedure in the equipment instruction manual.



#### **KEEP EQUIPMENT GUARDS IN PLACE**

Do not operate the equipment if the safety devices have been removed.



#### **KNOW WHERE AND HOW TO SHUT OFF THE EQUIPMENT IN CASE OF AN EMERGENCY**



#### **WEAR SAFETY GLASSES**

Failure to wear safety glasses with side shields could result in serious eye injury or blindness.



#### **INSPECT THE EQUIPMENT DAILY**

Inspect the equipment for worn or broken parts on a daily basis. Do not operate the equipment if you are uncertain about its condition.




#### **NEVER MODIFY THE EQUIPMENT**

Do not modify the equipment unless the manufacturer provides written approval.



#### **NOISE HAZARD**

You may be injured by loud noise. Hearing protection may be required when using this equipment.

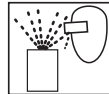

#### **PROJECTILE HAZARD**

You may be injured by venting liquids or gases that are released under pressure, or flying debris.



#### **PINCH POINT HAZARD**

Moving parts can crush and cut. Pinch points are basically any areas where there are moving parts.



#### **STATIC CHARGE**

Fluid may develop a static charge that must be dissipated through proper grounding of the equipment, objects to be sprayed and all other electrically conductive objects in the dispensing area. Improper grounding or sparks can cause a hazardous condition and result in fire, explosion or electric shock and other serious injury.



#### **WEAR RESPIRATOR**

Toxic fumes can cause serious injury or death if inhaled. Wear a respirator as recommended by the fluid and solvent manufacturer's Safety Data Sheet.



#### **TOXIC FLUID & FUMES**

Hazardous fluid or toxic fumes can cause serious injury or death if splashed in the eyes or on the skin, inhaled, injected or swallowed. LEARN and KNOW the specific hazards or the fluids you are using.



#### **FIRE AND EXPLOSION HAZARD**

Improper equipment grounding, poor ventilation, open flame or sparks can cause a hazardous condition and result in fire or explosion and serious injury.



#### **MEDICAL ALERT**

Any injury caused by high pressure liquid can be serious. If you are injured or even suspect an injury:

- Go to an emergency room immediately.
- Tell the doctor you suspect an injection injury.
- Show the doctor this medical information or the medical alert card provided with your airless spray equipment.
- Tell the doctor what kind of fluid you were spraying or dispensing.



#### **GET IMMEDIATE MEDICAL ATTENTION**

To prevent contact with the fluid, please note the following:

- Never point the gun/valve at anyone or any part of the body.
- Never put hand or fingers over the spray tip.
- Never attempt to stop or deflect fluid leaks with your hand, body, glove or rag.
- Always have the tip guard on the spray gun before spraying.
- Always ensure that the gun trigger safety operates before spraying.


**CA PROP  
65**

#### **PROP 65 WARNING**

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.


**IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PROVIDE THIS INFORMATION TO THE OPERATOR OF THE EQUIPMENT.  
FOR FURTHER SAFETY INFORMATION REGARDING THIS EQUIPMENT, SEE THE GENERAL EQUIPMENT SAFETY BOOKLET (77-5300).**

## Binks Models 95AR and 95ARV AUTOMATIC CONVENTIONAL SPRAY GUNS Typical Arrangement Diagram and Hook-up for Combined Fan and Atomizing Air

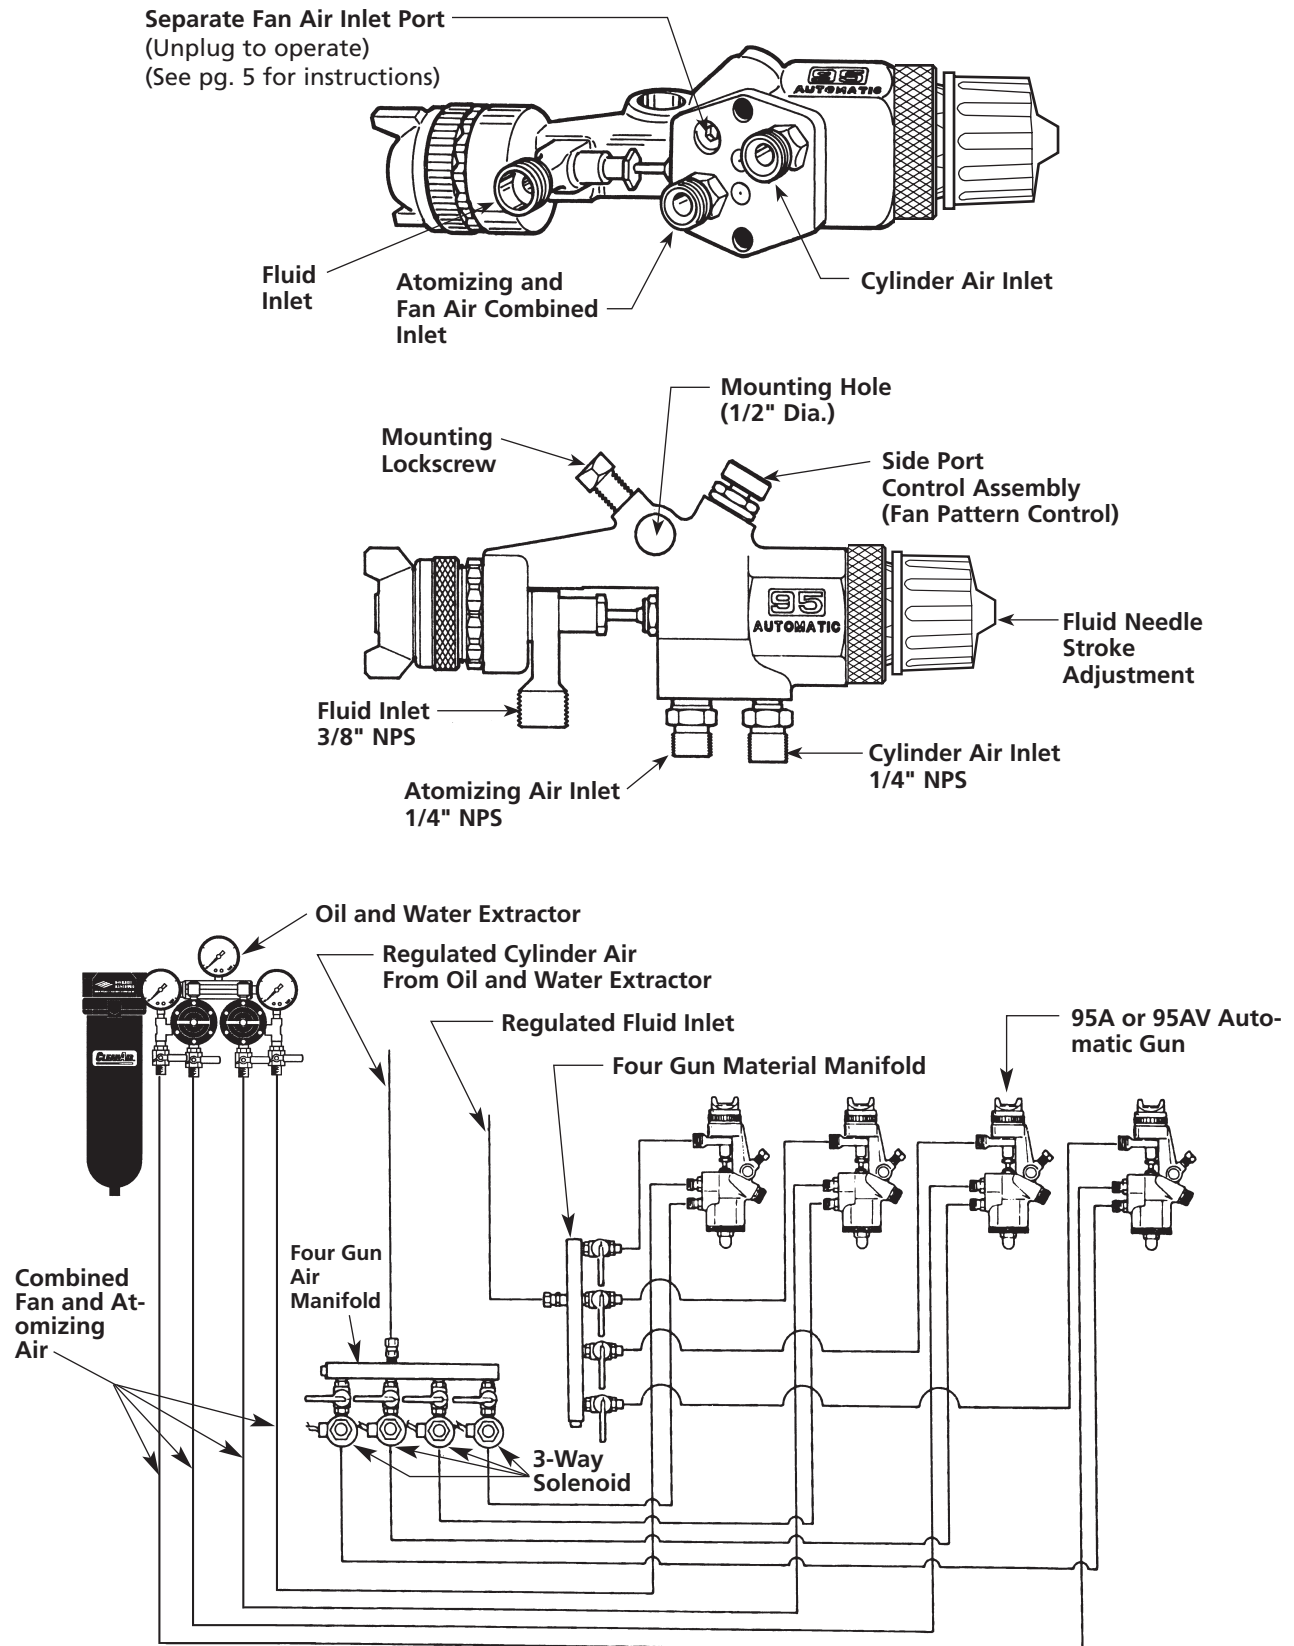

For some applications each gun may require individually regulated fluid and air inlet lines.

**Binks Models 95AR and 95ARV AUTOMATIC SPRAY GUNS**  
**Typical Arrangement Diagram and Hook-up for**  
**Separate Fan and Atomizing Air**  
 (See Page 5 for Internal Modifications to Gun)

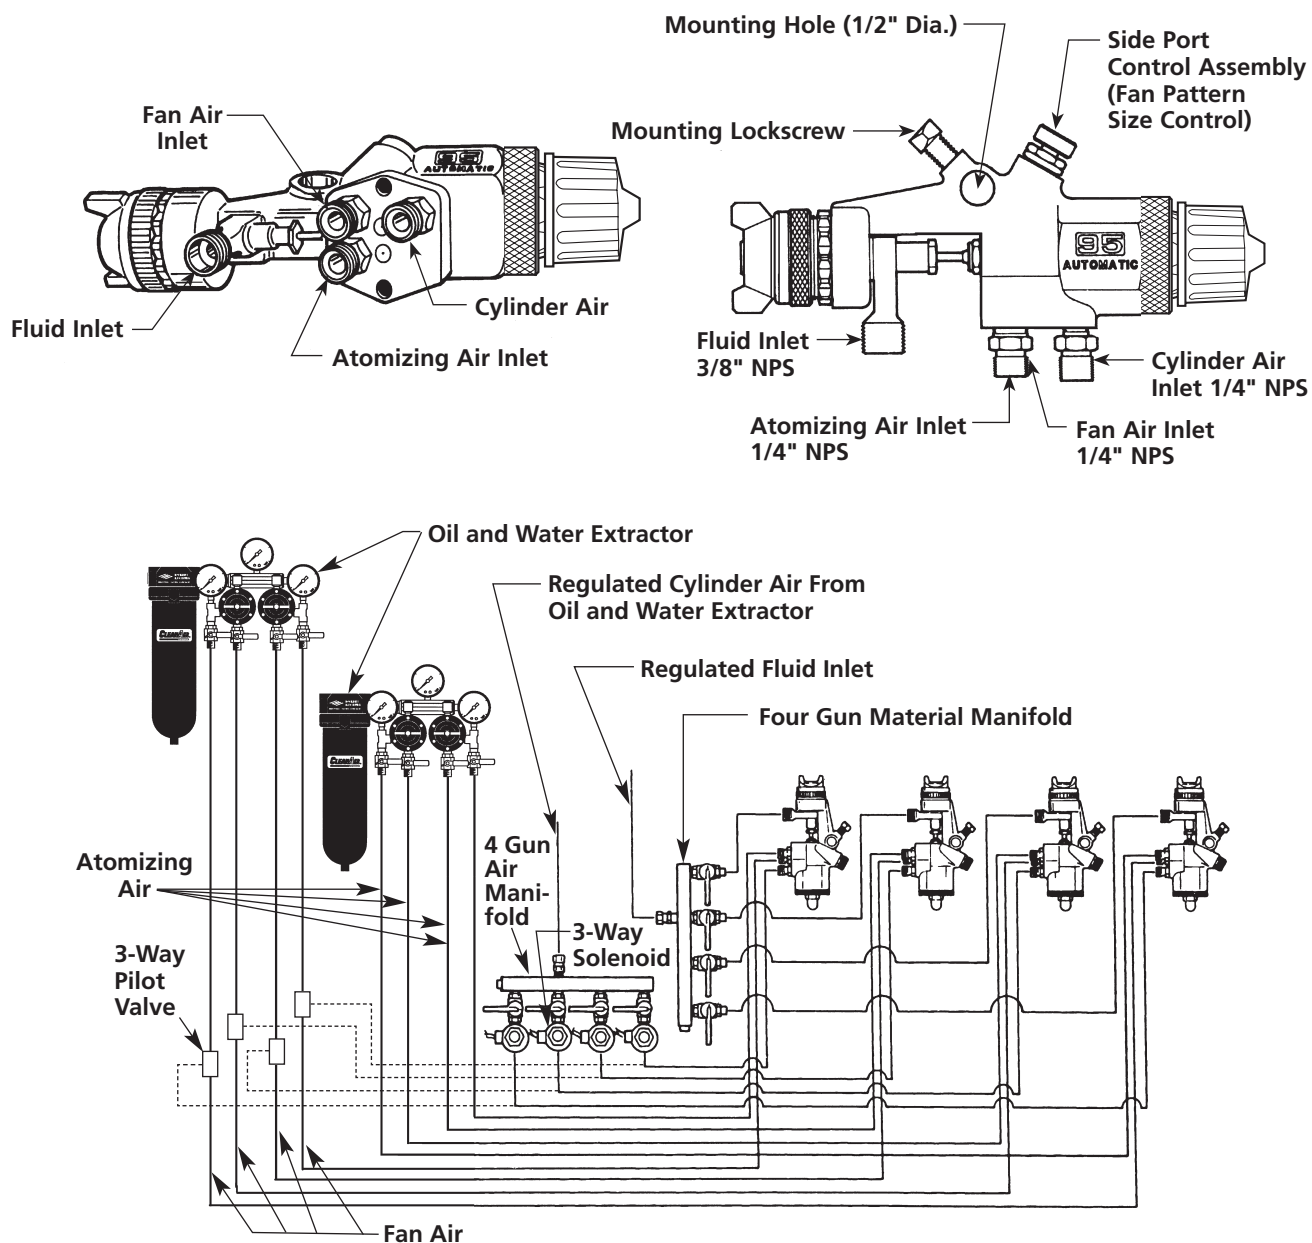

For some applications each gun may require individually regulated fluid and air inlet lines.

### GENERAL NOTES

1. Have at least 55-60 P.S.I. air pressure for cylinder's operating air. (Maximum 90 PSIG)
2. To reduce overspray and obtain maximum efficiency, always spray with lowest possible fluid/air pressure that produces an acceptable spray pattern.
3. The air line from gun to 3-way valve should be as short as possible for rapid operation.
4. All air used in the gun should be dirt and moisture

free. (This is accomplished by using an oil and water extractor).

5. Shut off all fluid and air lines to gun if gun is to stand idle for any length of time. (This is to prevent "build-up" or accumulation of minute leaks in the system and turning on the gun).

## TO CHANGE FROM COMBINED FAN AND ATOMIZING AIR TO SEPARATE FAN AND ATOMIZING AIR

1. Unscrew ratchet housing assembly (28) and remove material needle (22) and attached parts (23, 24, 25) (see assembly drawing page 10).
2. Remove piston assembly (18) by injecting low pressure air into cylinder air port (A).
3. With 5/32" allen wrench, remove plug (16) from hole (B) on inside of cylinder.
4. Insert set screw (50) into position as shown in side cut-away. (Set screw is packaged loose.)
5. Re-install plug (16).
6. Re-install piston (20), 2 springs (26, 27), material needle (22) and ratchet housing assembly (28). (See assembly drawing page 10).
7. Remove plug (47) from the fan air port (C).
8. Install fitting (36) into port (C). (Fitting is packaged loose.)

### ⚠ WARNING



Use of excessive pressure will cause piston to exit gun body at high velocity, possibly resulting in personal injury or damage to spray gun components. When removing the piston, aim back of gun in a safe direction and do not use excessive air pressure.

### NOTE

Double male nipple (36) shipped loose in a separate bag.

Plug (47)  
Remove and install  
D.M. Nipple (36)

Fan Air Inlet  
(Optional)

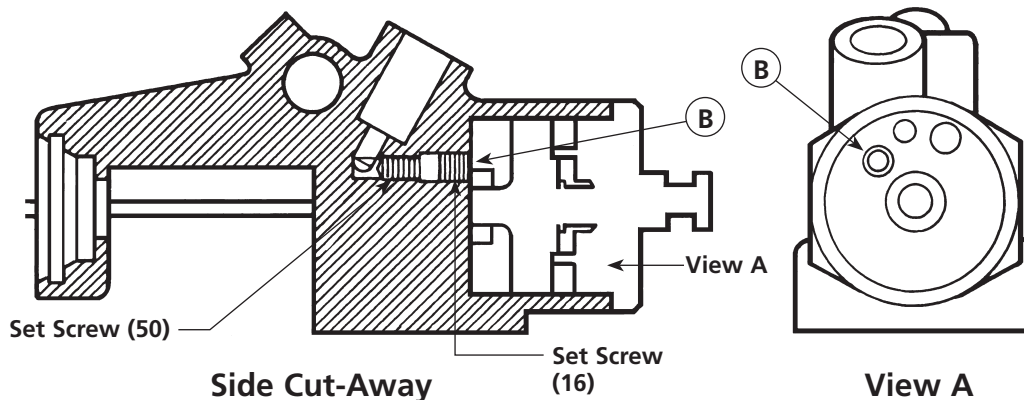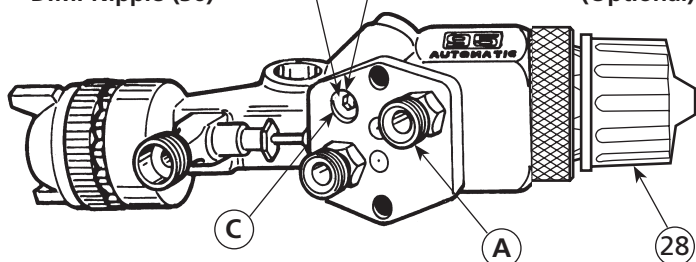

### NOTE

Set screw (50) shipped loose in a separate bag.

## SETUP FOR SPRAYING

### CONNECTING GUN TO MATERIAL HOSE

Gun should be connected by a suitable length of 3/8" diameter material hose fitted with a connector with a 3/8" NPS(f) nut at gun end. 1/4" diameter hose is recommended for use with low viscosity materials. (Fluid hoses of different composition are available for special fluids. See Binks hose catalog for hose selection.)

### CONNECTING GUN TO ATOMIZING AIR

Gun should be connected by a suitable length of 5/16"

or 3/8" diameter air hose fitted with a connector and a 1/4" NPS(f) nut at gun end.

### CONNECTING GUN TO CYLINDER AIR

Gun should be connected with 3/16" I.D. or 1/8" I.D. air hose of shortest length possible with 1/4" NPS(f) connector. Cylinder air must be connected to a 3-way manual air valve or 3-way solenoid valve to operate properly.

## OPERATING THE MODEL 95AR AUTOMATIC SPRAY GUN

### CONTROLLING THE MATERIAL FLOW

When fed from a pressure supply, an increase in the material pressure will increase the rate of flow. Correct fluid nozzle size insures correct material flow rate. If necessary, fluid flow can also be adjusted by adjusting the amount of needle travel. This is done by loosening lock nut (29) and adjusting control knob (30) until the correct needle travel is achieved.

### ADJUSTING AIR AND FLUID TIMING

A 1/16" gap between the air piston assembly (18) and needle body (24) should be maintained (see figure 1). This will create needle motion that will allow adequate air flow before the fluid starts flowing. The gap may be adjusted by partially removing the material needle (22),

screwing the needle either in or out of the needle body (24) and locking it back into the gun while being sure to check the clearance between the air valve piston (18) and the needle body (24).

### ADJUSTING THE SPRAY PATTERN

The width of the spray pattern is controlled by the side port control assembly (7). (See page 10). Turning this control clockwise until it is closed will give a round spray, turning it counterclockwise will widen the spray into a fan shape. The fan spray can be turned anywhere through 360° by positioning the air cap assembly (1) relative to the gun. To effect this, loosen air cap assembly, position nozzle, then, re-tighten air cap assembly.

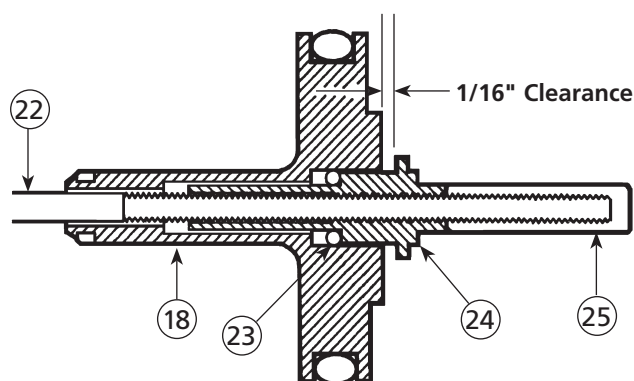


Figure 1

### FLUID NEEDLE ADJUSTMENT DIAGRAM



## MAINTENANCE

### LUBRICATION

Monthly: Remove piston assembly (18) and lubricate the air cylinder chamber and needle valve spring with a coating of Gunners Mate (51). Also, lubricate side port control assembly (7) with oil.

#### **⚠ CAUTION**

Never use lubricants containing silicone since these lubricants can cause finish defects. Binks Gunners Mate (51) is recommended.

### REMOVAL OF PISTON

To remove the piston, first unscrew the ratchet housing assembly (28), remove 2 springs (26 & 27) and pull out the material needle (22) and attached parts (23, 24, & 25). Remove the piston by applying a few pounds of air pressure to the cylinder air inlet. This air pressure will cause the piston to pop out.

#### **⚠ WARNING**

Excessive air pressure applied to the piston during removal may cause the piston to exit at a high velocity, resulting in personal injury. When removing the piston, aim back of gun in a safe direction and do not use excessive pressure.

### TO REPLACE NEEDLE SEAL AND GLAND ADAPTER IN FLUID INLET

Remove ratchet housing assembly (28), springs (26 & 27) and assemble material needle (22) and attached parts (23, 24, & 25). Proceed to the front of the gun and remove air cap assembly (1) and fluid nozzle (2). Then, using wrench (48), unscrew head insert (4) and remove fluid inlet (37 or 38). Unscrew packing nut (43) and remove spring (42) and seal backup (41). Using a no. 10 x 1-1/4" coarse thread wood screw (Binks part no. 20-6536) or small sheet metal screw, remove the needle seal (40) and gland adapter (39). Replace gland adapter (39) and needle seal (40). Reinsert seal backup (41), spring (42) and screw on packing nut (43) a couple of turns so it fits loosely by hand. Reassemble fluid inlet (37 or 38) to gun body (5) with head insert (4). Tighten head insert using wrench (48). Reassemble fluid nozzle (2) and air cap assembly (1). Reinsert material needle (22) and attached parts (23, 24 & 25), springs (26 & 27) and screw on ratchet housing assembly (28). Finally, tighten packing nut (43) until it bottoms out on fluid inlet (37 or 38).

## CLEANING

In certain states it is now against the law to spray solvents containing Volatile Organic Compounds (VOCs) into the atmosphere when cleaning a spray gun.

In order to comply with these new air quality laws, Binks recommends one of the following two methods to clean your spray finishing equipment:

1. Spray solvent through the gun into a closed system. An enclosed unit, or spray gun cleaning station, condenses solvent vapors back into liquid form which prevents escape of VOC's into the atmosphere.
2. Place spray gun in a washer-type container. This system must totally enclose the spray gun, cups, nozzles, and other parts during washing, rinsing, and draining

cycles. This type of unit must be able to flush solvent through the gun without releasing any VOC vapors into the atmosphere. Additionally, open containers for storage or disposal of solvent, or solvent-containing cloth or paper, used for surface preparation and clean-up may not be used. Containers shall be non-absorbent.

To clean the gun, flush the fluid lines with solvent and blow air through the air lines to make sure all the air passages are dry.

#### **⚠ CAUTION**

Never completely submerge the gun in solvent as this will dissolve the lubricating oil and dry out the seals.

## TROUBLESHOOTING

### FAULTY SPRAY

A faulty spray may be caused by improper cleaning, dried materials around the fluid nozzle tip or in the air cap. Soak these parts in thinners that will soften the dried material and remove with a brush or cloth.

#### **⚠ CAUTION**

Never use metal instruments to clean the air or fluid nozzles. These parts are carefully machined and any damage to them will cause faulty spray.

If either the air cap assembly (1) or fluid nozzle (2) are damaged, these parts must be replaced before perfect spray can be obtained.

### INTERMITTENT SPRAY

If the spray flutters, it is caused by one of the following faults:

1. Insufficient material available. Check supply and replenish if necessary.
2. Loose fluid nozzle (2). Tighten, but without using undue force.
3. Leakage at gland adapter (39) and needle seal (40). Tighten packing nut (43) if loose, and replace gland adapter and needle seal if necessary.
4. Fluid connection insufficiently tight or dirt on cone faces of connection. Correct as necessary.
5. Leaking cylinder air and/or inadequate pressure.

## NOZZLE, AIR CAP, AND NEEDLE SELECTION CHART FOR 95AR AND 95ARV AUTOMATIC GUNS

TYPE OF FLUID VISCOSITY TO BE SPRAYED	FLUID NOZZLE x AIR CAP	AIR CAP TYPE	CFM AT *			MAX. PATTERN AT 8"	FLUID NEEDLE
			30 PSI	50 PSI	70 PSI		
<b>VERY THIN VISCOSITY</b>	63SS x 63P	PE	4.5	7.5	10.0	5.0"	763
14-16 Seconds – No. 2 ZAHN Wash Primers Dyes Stains Solvents Water Inks	63ASS x 63P	PE	5.1	8.7	12.2	11.0"	763A
	63BSS x 63PB	PE	9.0	14.3	20.0	14.0"	763A
	66SS x 66SD	SE	7.9	12.1		10.5"	765
	66SS x 66SK	SE	11.0	15.2	19.5	13.0"	765
	63BSSS x 200●	PI	3.1	5.2	6.4	12.0"	763A
	63BSS x 21MD-3	PE	11.6	16.6	22.2	16.0"	763A
<b>THIN VISCOSITY</b>	63ASS x 63P	PE	5.1	8.7	12.2	11.0"	763A
16-20 Seconds – No. 2 ZAHN Sealers Lacquers Primers Inks Zinc Chromates Acrylics Lubricants	66SS x 66SK	SE	11.0	15.2	19.5	13.0"	765
	63BSS x 200●	PI	3.1	5.2	6.4	12.0"	763A
	63BSS x 21MD-3	PE	11.6	16.6	22.2	16.0"	763A
<b>MEDIUM VISCOSITY</b>	63BSS x 63PB	PE	9.0	14.3	20.0	14.0"	763A
19-30 Seconds – No. 2 ZAHN Synthetic Enamels Varnishes Shellacs Fillers Primers Epoxies Urethanes Lubricants Wax Emulsions	63CSS x 63PR	PE	9.5	15.5	19.5	18.0"	763A
	65SS x 63PR	PE	11.0	16.5	22.0	15.0"	765
	66SS x 66SD	SE	7.9	12.1		11.0"	765
	66SS x 66SK	SE	11.0	15.2	19.5	13.0"	765
	63CSS x 200●	PI	3.1	5.2	6.4	12.0"	763A
	63BSS x 21MD-3	PE	11.6	16.6	22.2	16.0"	763A
	66SS x 21MD-2	PE	12.5	18.3	24.4	13.0"	765
<b>HEAVY (CREAM-LIKE) VISCOSITY</b>	67SS x 206	PI	6.0	9.5	13.0	15.0"	767
Over 28 Seconds – No. 4 FORD House Paint Wall Paint (Oil, Latex) Block Sealers Mill Whites Vinyls Acrylics Epoxies	68SS x 201	PI	4.6	6.8	9.1	11.0"	768
	68SS x 101■	PI	4.6	6.8	9.1	11.0"	768
	66SS x 63PB	PE	9.0	14.3	20.0	14.0"	765
	67SS x 67PB	PE	9.5	14.9	19.5	12.0"	767
	68SS x 68PB	PE	9.5	14.1	19.1	12.0"	768
	67SS x 21MD-2	PE	12.5	18.3	24.4	13.0"	765
<b>VERY HEAVY VISCOSITY</b>	68SS x 206	PI	6.2	9.8	13.2	15.0"	768
Unaggregated Block Fillers Textured Coatings Fire Retardants Road Marking Paint Bitumastics Cellular Plasticsols	68SS x 68PB	PE	9.5	14.1	19.1	12.0"	768
	59ASS x 244●	PI	7.8	11.5	15.2	12.0"	759
	59BSS x 250●	PI	7.8	11.0	14.7	RND	759
	59BSS x 252●	PI	7.8	11.5	15.2	12.0"	759
<b>ADHESIVES</b>	63CSS x 63PB	PE	9.0	14.3	20.0	14.0"	763A
Waterbase White Vinyl Glue Solvent Base Neoprenes (Contact Cements)	66SS x 63PR	PE	9.5	15.5	19.5	15.0"	765
	67SS x 67PB	PE	9.5	14.1	19.1	12.0"	767
	63SS x 66SD	PE	7.9	12.1	16.2	4.0"	763
	63ASS x 66SD	PE	7.9	12.1	16.2	7.0"	763A
	66SS x 66SD-3	PE	10.4	15.4	20.4	9.0"	765
<b>CERAMICS &amp; SIMILAR ABRASIVE MATERIAL</b>	63CVT x 66PH	PE	11.5	16.4	22.0	13.0"	763VT
Glazes, Engobes Porcelain Enamel	67VT x 21MD-2	PE	12.5	18.3	24.4	13.0"	767VT
	67VT x 67PD	PE	10.0	15.0	20.0	15.0"	767VT
	68VT x 68PB	PE	9.5	14.1	19.1	12.0"	768VT

\*Be certain your air supply is sufficient to operate nozzles selected.

†PE, Pressure feed, external. SE, Siphon feed, external.

PI, Pressure feed, internal. VT, Tungsten Carbide Fluid Nozzles. ■ Tungsten Carbide Air. ● Nitralloy Air Nozzle.

Nozzle No.	59ASS	59BSS	59CSS	63ASS	63BSS	63CSS	65SS	66SS	67SS	68SS
Orifice Size	.171	.218	.281	.040	.046	.052	.059	.070	.086	.110



## NOZZLE AND NEEDLE SELECTION CHART FOR 95AR and 95ARV AUTOMATIC GUNS (cont.)

TYPE OF FLUID TO BE SPRAYED	FLUID x AIR NOZZLES	NOZZLE TYPE†	CFM AT *			MAX. PATTERN AT 8"	FLUID NEEDLE
			30 PSI	50 PSI	70 PSI		
CONCRETE CURING COMPOUNDS	63SS x 200●	PI	3.1	5.2	6.4	15.0"	765
	67SS x 206●	PI	6.0	9.5	13.0	18.0"	767
	68SS x 206●	PI	6.2	9.8	13.2	20.0"	768
MULTICOLOR PAINTS	66SS x 200●	PI	3.1	5.2		12.0"	765
	67SS x 206●	PI	6.0	9.5		15.0"	767
PTFE	63ASS x 63PB	PE	9.0	14.3	20.0	10.0"	763A
	63BSS x 63PR	PE	9.5	15.5	19.5	15.0"	763A
	66SS x 66SD	SE	7.9	12.1		7.0"	765
HAMMERS	63CSS x 63PB	PE	9.0	14.3		14.0"	763A
	66SS x 63PB	PE	9.0	14.3		14.0"	765
	66SS x 66SD	SE	7.9	12.1		7.0"	765
WRINKLE ENAMELS	63CSS x 63PB	PE	9.0	14.3	20.0	10.0"	763A
	66SS x 63PB	PE	9.0	14.3	20.0	10.0"	765
ZINC RICH COATINGS	66SS x 67PD	PE	12.0	18.0	24.0	15.0"	765N
	67VT x 67PB	PE	9.5	14.1	19.1	12.0"	767VT

\*Be certain your air supply is sufficient to operate nozzles selected.

†PE, Pressure feed, external. SE, Siphon feed, external.

PI, Pressure feed, internal.VT, Tungsten Carbide Fluid Nozzles.

■ Tungsten Carbide Air. ● Nitralloy Air Nozzle.

Nozzle No.	59ASS	59BSS	59CSS	63ASS	63BSS	63CSS	65SS	66SS	67SS	68SS
Orifice Size	.171	.218	.281	.040	.046	.052	.059	.070	.086	.110

## STANDARD PART NUMBERS for 95AR GUN with Fluid Nozzles and Air Caps and Needles Included.


6467-2800-7 ..... 95AR GUN 63BSS-63PB

6467-4307-9 ..... 95AR GUN 66SS-66SD

## COMPATIBLE 95ARV GUN NOZZLE SET-UPS (95AR Nozzle set-ups shown on pages 12-13)

TUNGSTEN CARBIDE FLUID NOZZLE DESIGNATION	CARBIDE TIP FLUID NOZZLE PART NUMBER	CARBIDE TIP FLUID NEEDLE DESIGNATION	CARBIDE TIP FLUID NEEDLE PART NUMBER	COMPATIBLE AIR CAPS	AIR CAP PART NUMBER
63CVT	45-6332	763VT	47-762/	63P 63PB 63PR 200	46-6000 46-6002 46-6079 46-2200
64VT	45-6402	764VT	47-764	64PA	46-6007
67VT	45-6702	767VT	47-767	67PB 67PD 706 709SS	46-6026 46-6028 46-2013 Tip and 54-372 Base 46-2020 Tip and 54-372 Base
68VT	45-6802	768VT	47-769	68PB 201 706 709SS	46-6032 46-2201 Tip and 54-1583 Base, 54-1584 Ring 46-2013 Tip and 54-372 Base 46-2020 Tip and 54-372 Base

Binks Model 95AR, 95ARV AUTOMATIC AIR SPRAY GUN ASSEMBLY DRAWING

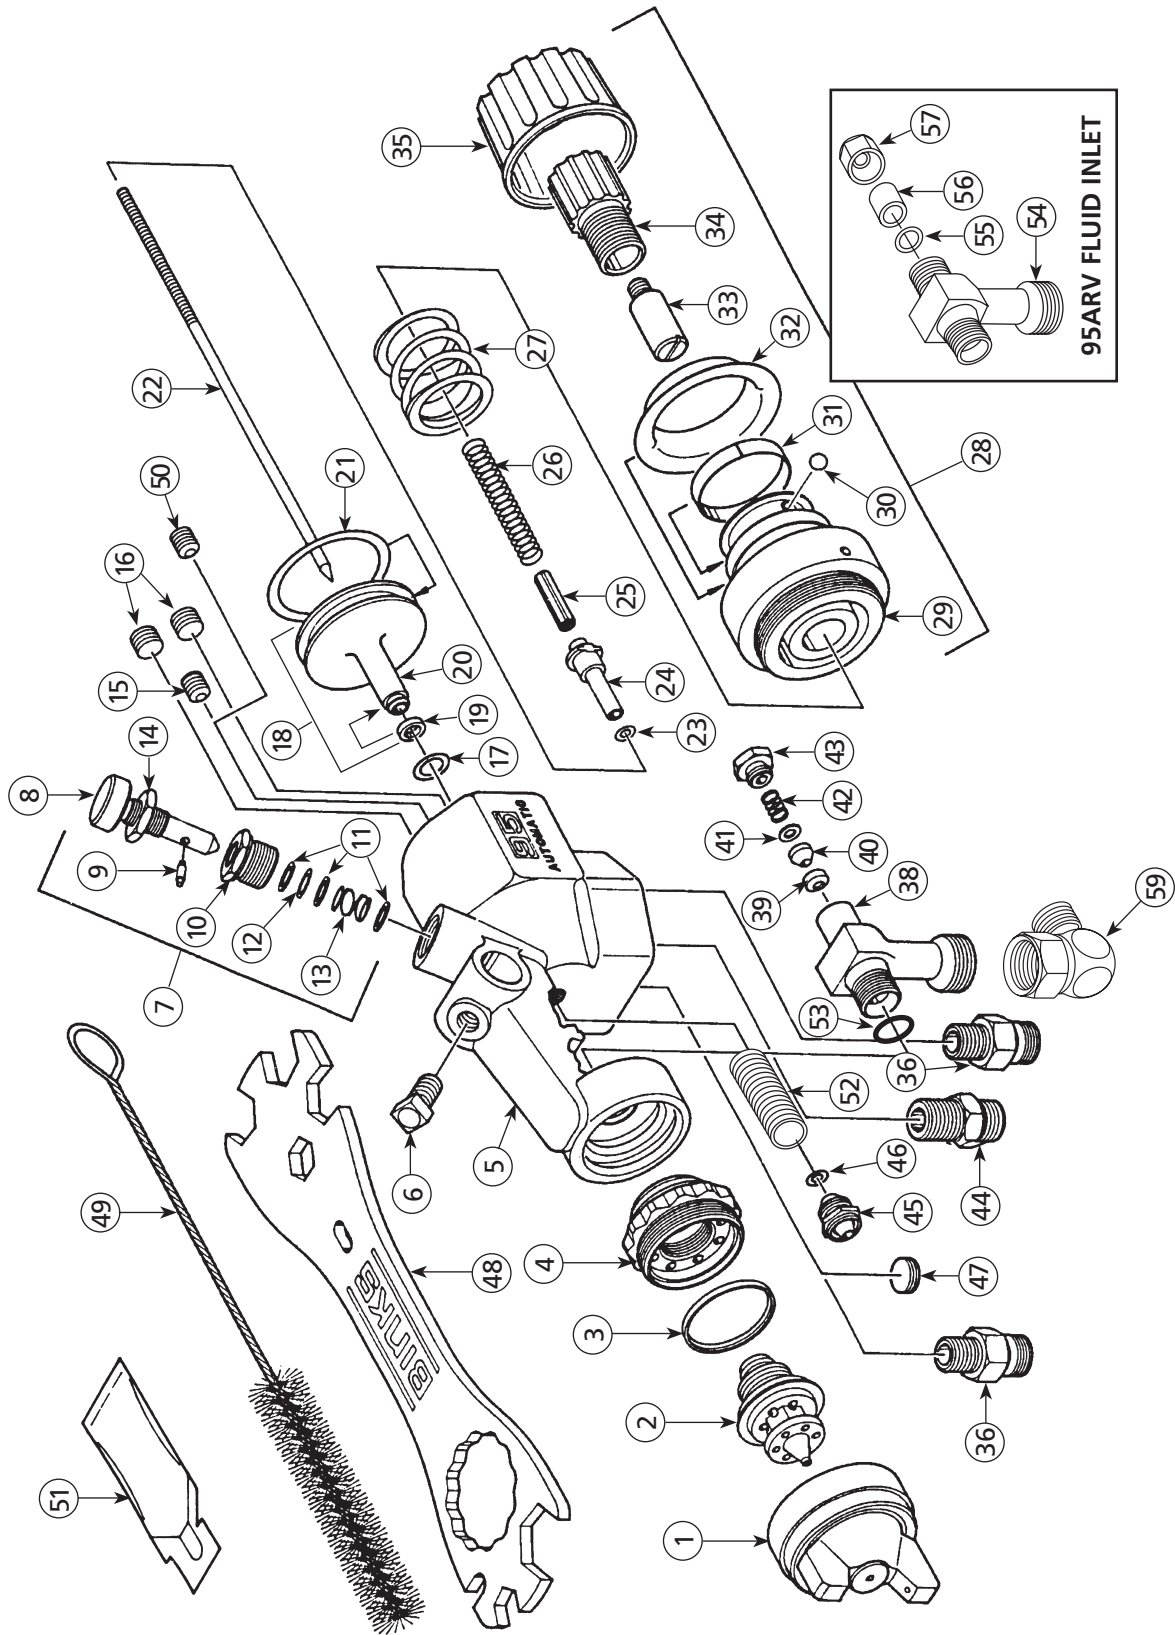

▲ Items (36) and (50) are for installations requiring separate fan and atomizing air control. Items are packaged loose. (See pg. 5)

## PARTS LIST

(When ordering, please specify Part No.)

ITEM NO.	PART NO.	DESCRIPTION	QTY.	ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	*	AIR CAP ASSEMBLY .....	1	32	54-1870	INDICATOR.....	1
2	*	FLUID NOZZLE .....	1	33	54-3583	SCREW.....	1
3	54-918-5 •▲	GASKET (5 PACK) .....	1	34	—	RATCHET .....	1
	54-918-25 •▲	GASKET (25 PACK) .....	1	35	—	CAP.....	1
4	54-4215	HEAD INSERT .....	1	36	71-28	DOUBLE MALE NIPPLE .....	2
5	—	95 SERIES AUTO GUN ASSEMBLY	1			1/8 NPT x 1/4 NPS	
6	—	SQ. HD. BOLT 5/16-18 x 3/4 .....	1	38	54-4210	FLUID INLET (95AR Gun) .....	1
7	54-3720	SIDE PORT CONTROL ASSEMBLY.	1	39	54-4264 •▲	GLAND ADAPTER (95AR Gun) .....	1
8	54-3721	CONTROL SPINDLE .....	1	40	54-4265 •▲	NEEDLE SEAL (95AR Gun) .....	1
9	31-258	RETAINING PIN .....	1	41	54-4266 •▲	SEAL BACKUP (95AR Gun) .....	1
10	31-256	STUFFING BOX.....	1	42	54-4267 •▲	SPRING (95AR Gun) .....	1
11	31-259	INNER WASHER .....	3	43	54-4263 •▲	PACKING NUT (95AR Gun) .....	1
12	20-3620-5 ▲	O-RING .....	1	44	57-13-1	DOUBLE MALE NIPPLE .....	1
13	31-241	CONTROL SPRING.....	1			1/4 NPT x 1/4 NPS	
14	—	JAM NUT.....	1	45	54-3716	AIR VALVE GLAND ASSEMBLY.....	1
15	54-3987 ■	PLUG .....	1	46	— ▲	O-RING .....	1
16	54-3988 ■	PLUG 1/16"-20 NPT .....	2	47	54-3986 ■	PLUG 1/8-27 NPT .....	1
17	20-5286 ▲	O-RING .....	1	48	54-4213	WRENCH (Optional).....	1
18	54-3706	PISTON ASSEMBLY .....	1	49	82-469	GUN BRUSH .....	1
19	54-3729 ◆▲	SEAL .....	1	50	20-2141	SET SCREW 1/4"-20 UNC .....	1
20	54-3722 ◆	PISTON .....	1	51	54-3871	GUNNERS MATE .....	1
21	20-4511 ▲	O-RING .....	1	52	54-4270	NEEDLE COVER.....	1
22	*	NEEDLE .....	1	53	54-3592•	FLUID INLET SEAL.....	1
23	20-3515-5 ▲	O-RING (5 PACK) .....	1	54	— ★	FLUID INLET (95ARV Gun) .....	1
24	54-3713	NEEDLE BODY .....	1	55	20-2227-5•▲★	O-RING (5 PACK) .....	1
25	54-3709	NEEDLE LOCKING NUT.....	1	56	54-4531 •▲★	SPACER (95ARV Gun).....	1
26	54-1697	SPRING Needle Return .....	1	57	54-4542 •▲★	NUT ASSEMBLY (95ARV Gun).....	1
27	54-1876	SPRING Piston Return .....	1	59	73-24	90° S.S. CONNECTION (Optional)....	1
28	54-3582	RATCHET HOUSING ASSEMBLY ...	1				
29	54-3584	RATCHET HOUSING .....	1				
30	20-2183	BALL .....	2				
31	54-1878	SPRING .....	1				

\* See air cap, fluid nozzle and needle selection chart on pages 8-9.

• Part of Repair Kit 54-4225 (Fluid inlet & fluid nozzle packing kit).

▲ Part of Repair Kit 54-3579 (Fluid inlet, nozzle & piston seal kit).


■ Part of gun body assembly (5). ◆ Part of (18). Also available separately.

★ Available in 54-4511 Kit for Vitrious Set-Up.


## OPTIONAL NOZZLE SET-UPS

ITEM NO.	PART NO.	DESCRIPTION	QTY.
61	54-1584	RETAINING RING .....	1
62	54-1583	NOZZLE TIP BASE ASSEMBLY.....	1
63	54-2065	RING .....	1
64	47-65900	NEEDLE ASSEMBLY.....	1

### INTERNAL MIX HEAVY MATERIAL NOZZLES (OPTIONAL)

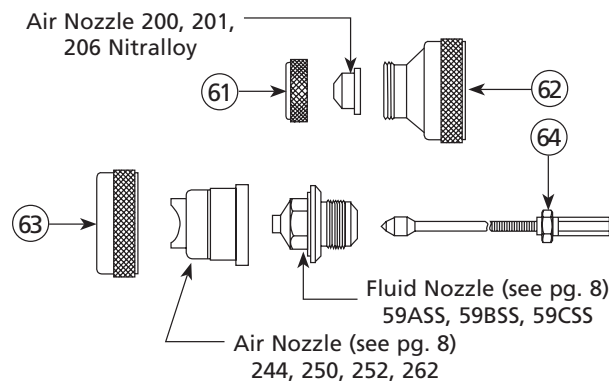

GUN DIMENSIONS

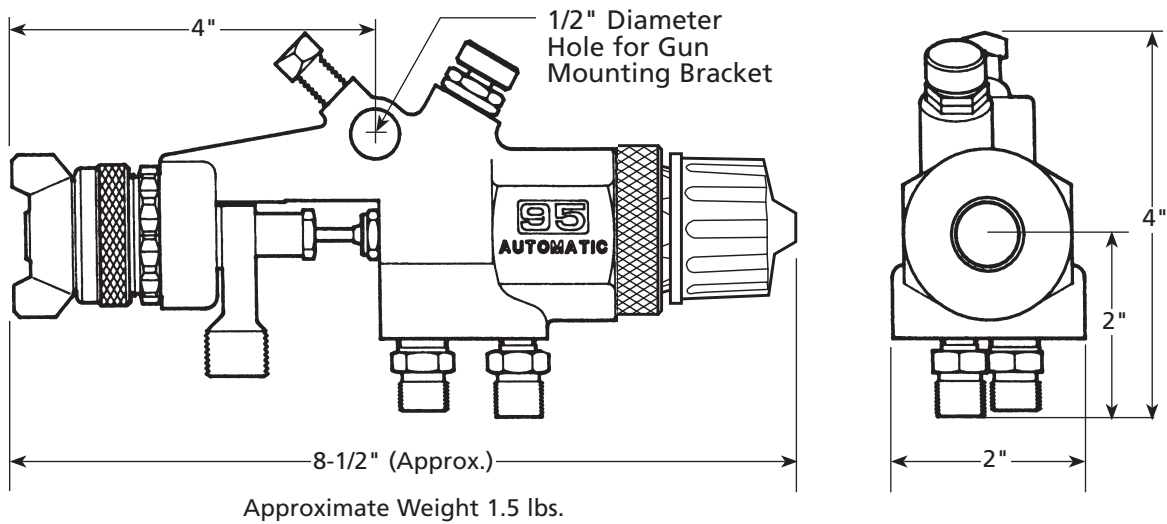


ACCESSORIES (Optional)

MOUNTING BRACKETS

Use for automatic guns. Adjustable to any position. 18" bracket arm. One inch diameter bracket clamp hole for attachment to facility hardware.

54-380 Steel bracket for automatic guns. Shipping weight: 5 lbs.

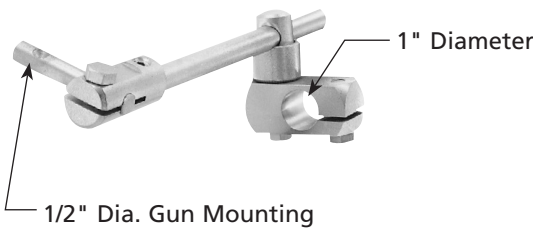

COMPATIBLE 95AR GUN NOZZLE SET-UPS

STAINLESS STEEL FLUID NOZZLE DESIGNATION	STAINLESS STEEL FLUID NOZZLE PART NUMBER	STAINLESS STEEL FLUID NEEDLE DESIGNATION	STAINLESS STEEL FLUID NEEDLE PART NUMBER	COMPATIBLE AIR CAPS	AIR CAP PART NUMBER
62SS	45-6201	762	47-760	63P 63PB 63PR 66PH 66SD 66SD-3 66SK	46-6000 46-6002 46-6079 46-6016 46-6020 46-6092 46-6082
63ASS	45-6311	763A	47-763	63P 63PB 63PR 66PH 66SD 66SD-3 66SK	46-6000 46-6002 46-6079 46-6016 46-6020 46-6092 46-6082

Continued on next page.

### COMPATIBLE 95AR GUN NOZZLE SET-UPS (cont.)

STAINLESS STEEL FLUID NOZZLE DESIGNATION	STAINLESS STEEL FLUID NOZZLE PART NUMBER	STAINLESS STEEL FLUID NEEDLE DESIGNATION	STAINLESS STEEL FLUID NEEDLE PART NUMBER	COMPATIBLE AIR CAPS	AIR CAP PART NUMBER
63BSS	45-6321	763A	47-763	63P 63PB 200  201	46-6000 46-6002 46-2200 Tip and 54-1583 Base, 54-1584 ring 46-2201 Tip and 54-1583 Base, 54-1584 Ring
63CSS	45-6331	763A	47-763	63P 63PB 63PR 200  201	46-6000 46-6002 46-6079 46-2200 Tip and 54-1583 Base, 54-1584 Ring 46-2201 Tip and 54-1583 Base, 54-1584 Ring
66SS	45-6601	765	47-765	63P 63PB 63PR 66PD 66PE 66PH 66R 66S 66SD 66SD-3 66SK	46-6000 46-6002 46-6079  46-6014 46-6016 46-6041 46-6018 46-6020 46-6092 46-6082
67SS	45-6701			67PB 67PD 706 709SS 713 797	46-6028 46-2013 Tip and 54-372 Base 46-2020 Tip and 54-372 Base
68SS	45-6801	768	47-768	68PB 201  206 706  709SS 713	46-6032 46-2201 Tip and 54-1583 Base, 54-1584 Ring  46-2013 Tip and 54-1583 Base, 54-1584 Ring 46-2020 Tip and 54-372 Base
59ASS	45-5911	759		244	46-2244 Tip and 54-2065 Ring
59BSS	45-5912	759		250 252	46-2250 Tip and 54-2065 Ring 46-2252 Tip and 54-2065 Ring
59CSS	45-5913	759		262	46-2262 Tip and 54-2065 Ring
L6SS	45-6605	765	47-765	63P 63PB 66PD 66PE 66PH 66S 66SK	46-6000 46-6002  46-6014 46-6016 46-6018 46-6082

**NOTES**



---

**NOTES**

---

## WARRANTY POLICY

This product is covered by Carlisle Fluid Technologies' materials and workmanship limited warranty. The use of any parts or accessories, from a source other than Carlisle Fluid Technologies, will void all warranties. Failure to reasonably follow any maintenance guidance provided may invalidate any warranty.

For specific warranty information please contact Carlisle Fluid Technologies.

Carlisle Fluid Technologies is a global leader in innovative finishing technologies. Carlisle Fluid Technologies reserves the right to modify equipment specifications without prior notice.

DeVilbiss®, Ransburg®, ms®, BGK®, and Binks®  
are registered trademarks of Carlisle Fluid Technologies, Inc.

©2018 Carlisle Fluid Technologies, Inc.  
All rights reserved.

---

For technical assistance or to locate an authorized distributor,  
contact one of our international sales and customer support locations.

Region	Industrial / Automotive	Automotive Refinishing
Americas	Tel: 1-800-992-4657 Fax: 1-888-246-5732	Tel: 1-800-445-3988 Fax: 1-800-445-6643
Europe, Africa, Middle East, India	Tel: +44 (0)1202 571 111 Fax: +44 (0)1202 573 488	
China	Tel: +8621-3373 0108 Fax: +8621-3373 0308	
Japan	Tel: +81 45 785 6421 Fax: +81 45 785 6517	
Australia	Tel: +61 (0) 2 8525 7555 Fax: +61 (0) 2 8525 7575	



DISTRIBUTED BY COATING EQUIPMENT TECHNOLOGY, INC

For the latest information about our products, visit [www.carlisleft.com](http://www.carlisleft.com)