



HVLP AIR CAP AND FLUID NOZZLE CHART

MODEL NO.	AIR CAPS	PRESS. OR SIPHON	*MAX GUN INLET PRESS. FOR HVLP	FAN CONTROL	SCFM @ MAX GUN INLET	STANDARD IN CAT PACK	AVAILABLE FLUID NOZZLES TIPS	NEEDLES / marking on needle
CAT SLP (CSLP)	23-1308	Pressure	29*	60-1504 (S)	13.5	Included	33-0208 0.8mm (.022")	40-1308 (308)
	23-1310	Pressure					33-0210 1.0mm (.040")	40-1310 (310)
	23-1312	Pressure					33-0212 1.2mm (.046")	40-1312 (312)
	23-1313	Pressure				Included	33-0213 1.3mm (.052")	40-1313 (313)
	23-1314	Pressure					33-0214 1.4mm (.055")	40-1314 (314)
	23-1315	Pressure					33-0215 1.5mm (.059")	40-1315 (315)
	23-1317	Pressure				Included	33-0217 1.7mm (.070")	40-1317 (317)
	23-1319	Pressure					33-0219 1.9mm (.075")	40-1319 (319)
	23-1322	Pressure					33-0222 2.2mm (.086")	40-1322 (322)

Actual fluid nozzle and air cap combinations are determined by application (see application chart page 4)

*Note: Air cap test gages are available to confirm HVLP compliance.

*Gun inlet pressures may vary as required by application

Operation and Maintenance Instructions for *CAT SLP* Spray Guns

Operation

1. Connect air supply hose at handle of gun.
2. Connect a pressurized fluid supply to the gun fluid inlet.
3. Fluid flow can be controlled using the fluid control knob, this restricts flow by limiting needle travel. It is best to control fluid flow by proper selection of fluid orifice size and use the fluid control knob to "fine tune flow rate".
4. Fan width can be adjusted using the fan control knob. Turning the knob clockwise narrows the fan.

Maintenance

IMPORTANT! Routine cleaning and maintenance is essential to insure proper gun operation.

Several states prohibit spraying solvent into the atmosphere and require the use of covered gun cleaner.

1. If a gun cleaner is being used, connect and clean the gun in the gun cleaner according to the manufactures instructions.
2. If a gun cleaner is not being used:
Remove air cap and clean separately using clean solvent.
For pressure setups, connect a pressurized solvent supply to the fluid inlet, trigger the gun allowing solvent to flow thru the gun until clean.

NOTE: Gun head disassembly is not recommended for normal cleaning and maintenance.

Gun head disassembly and reassembly instructions:

Have repair kit # 10-106 available before gun disassembly.


Gun head disassembly

To remove the nozzle carrier (4) and air cap adapter (6):

1. Remove the air cap (1), fluid nozzle tip (2), fluid nozzle body (3), and needle (13).
2. Remove the needle seal cartridge (23).
3. Loosen the locknut (9) and remove fluid inlet (10) using a 5/8" open-end wrench.
4. The nozzle carrier (4) and air cap adapter (6) will now slide forward from the gun body (11).

Gun head reassembly

1. Install a new o-ring (5 and 7) on the air cap adapter (6).
2. Install the thread locknut (9) onto the fluid inlet (10) as far as possible.
3. Install a new fluid inlet seal (8) into the recess area on the nozzle carrier (4) inlet port.
4. Slide the nozzle carrier (4) into air cap adapter (6) and insert into the gun body (11) as far as possible. Be sure the nozzle carrier (4) extends into the hole at the back of the gun head. Install the needle seal (23) but do not tighten.
5. Rotate the nozzle carrier (4) until the fluid inlet port in the nozzle carrier (4) is aligned with the threaded hole in the body. While in this position, insert the fluid inlet (10) and tighten firmly.
6. Tighten the needle seal (23) to approx. 12 ft.-lb. torque.
7. Tighten the fluid inlet (10) to approx. 25 ft.-lb. torque.
8. Tighten the locknut (9) to approx. 33 ft.-lb. torque.

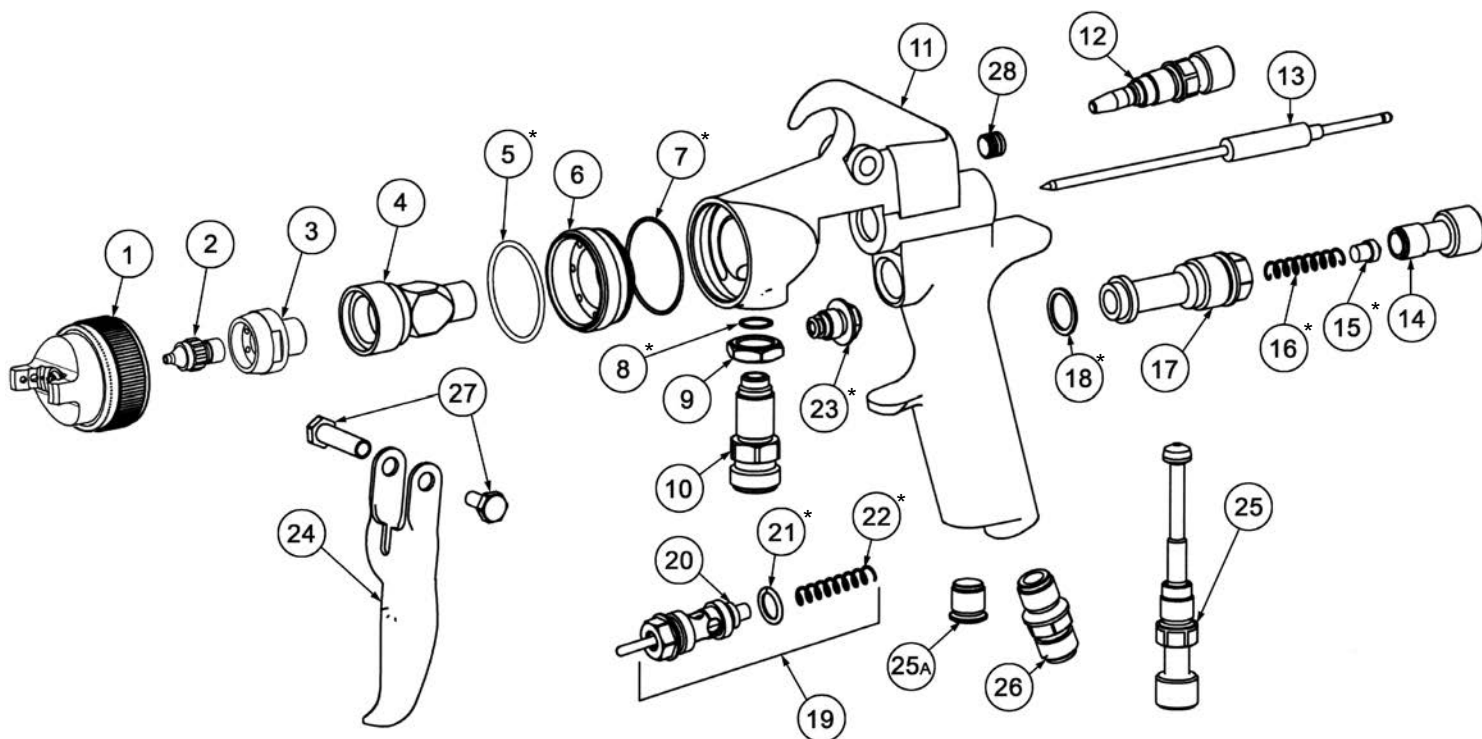

HVLP AIR CAP TEST GAGES

FOR
CSLP
GUNS

23-1308-G
23-1310-G
23-1312-G
23-1313-G
23-1314-G
23-1315-G
23-1317-G
23-1319-G
23-1322-G

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	See Air Cap Chart	Air Cap**	16	60-204	Needle Return Spring*
2	See Air Cap Chart	Fluid Nozzle Tip**	17	60-201	Rear Bushing
3	33-1202	Fluid Nozzle Body	18	60-119	Seal*
4	60-L31H	Nozzle Carrier	19	60-1520	Air Valve Assembly
5	98-8026	O-Ring*	20	60-302	Air Valve Poppet
6	60-34H	Air Cap Adapter	21	60-125	O-Ring*
7	60-131	O-Ring*	22	61-1003	Air Valve Spring*
8	60-124	Fluid Inlet Seal*	23	60-1400	Needle Seal Cartridge*
9	60-128	Locknut	24	60-2101	Trigger
10	60-126	Fluid Inlet Fitting	25	60-1510	Air Control
11	60-1120	CAT SLP Gun Body HVLP	25A	60-122	Plug (optional)
12	See Air Cap Chart	Fan Control Assembly**	26	60-104	Air Inlet Fitting
13	See Air Cap Chart	Fluid Needle**	27	60-1033	Trigger Pivot Set
14	60-202	Fluid Control Knob	28	98-0109	Allen Plug
15	60-205	Spring Seat*			

**See air cap selection chart on page 1

*Indicates part included in repair kit # 10-106

FLUID NOZZLE / AIR CAP SELECTION CHARTS

CAT SLP Series - Pressure Feed Guns

CSLP HVLP SPRAY GUN

MATERIAL TYPE	FLUID ORIFICE x AIR CAP	MAXIMUM PATTERN WIDTH	PRESS. / SIPHON
Very Thin less than 16 sec. Zahn #2 inks , dyes, solvents, stains	1.0 mm x 1310	12	P
Thin 16 to 20 sec. Zahn #2 lacquers, enamels, primers, sealers	1.0 mm x 1310 1.3 mm x 1313	12 12	P P
Medium 21 to 30 sec. Zahn #2 automotive base coat enamels, primers epoxies, urethanes automotive clear coat	1.3 mm x 1313 1.5 mm x 1315 1.7 mm x 1317	12 12 12	P P P
Heavy over 30 sec. Zahn #2 heavy body primers high solid enamels high solid automotive coatings adhesives	1.5 mm x 1315 1.7 mm x 1317 1.9 mm x 1319 2.2 mm x 1322	12 12 12 12	P P P P

CP-CSLP Smart Pack Includes:

98-0104 3/8" Socket
98-0112 Ratchet Wrench
60-8001 Gun Wrench
98-0113 Gun Cleaning Brush
Air Caps and Needles Shown on Page 1

CP-CSLP-303R2 Includes:

51-303 1 QT Aluminum Pressure Cup
52-5R2 Pressure Cup Regulator
98-0104 3/8" Socket
98-0112 Ratchet Wrench
60-8001 Gun Wrench
98-0113 Gun Cleaning Brush
Air Caps and Needles Shown on Page 1

CP-CSLP-PPSR2 Includes:

91-460 950 mL 3M™ PPS™ Pressure Cup
91-462 Lids and Liners (Available in 25 Pack)
91-475 #18 PPS Adapter
52-5R2 Pressure Cup Regulator
98-0104 3/8" Socket
98-0112 Ratchet Wrench
60-8001 Gun Wrench
98-0113 Gun Cleaning Brush
Air Caps and Needles Shown on Page 1



CP-CSLP

CSLP NOZZLE KITS

JK1308
JK1310
JK1312
JK1313
JK1314
JK1315
JK1317
JK1319
JK1322



CP-CSLP-303R2



CP-CSLP-PPSR2

CET

DISTRIBUTED BY COATING EQUIPMENT TECHNOLOGY, INC.
store.cetinc.com • (586) 210-0555